


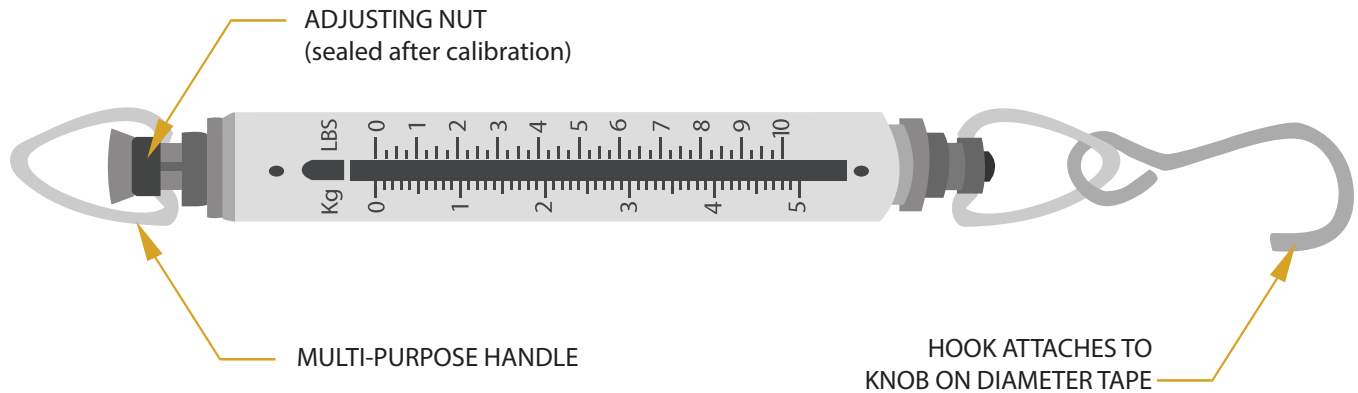

0-10 POUND TENSION SCALE



Instructions for use:


To use tensioner, attach hook to the knob of Pi Tape® measurement tape.

Position tape around object to be measured.

Use tensioner as an extension of the knob; applying force by pulling the multi-purpose handle.

Check scale of tensioner until 5 pounds tension is achieved.

Tension Scale tolerance: $\pm .25$ of a pound

PI TAPE and the  logo are trademarks of Pi Tape Texas, LLC, and they are registered in the USA and in 45 other countries.



MEXICO
Tel. +52 (55) 2603 7450

NUEVO LEON
Tel. +52 (81) 2235 9264

JALISCO
Tel. +52 (33) 1543 3419

February 2021 Rev B

VENTAS@ATRYA.COM.MX

© Copyright 2019 Pi Tape Texas LLC. All rights reserved.

WWW.ATRYA.COM.MX