


### TO READ OUTSIDE DIAMETER METRIC WIDE TAPE

#### **GAGE MEMBER**



## Vernier Scale divides each graduation on Gage Member into 50 parts or .01mm

#### **EXAMPLE**

Make certain the tape and object to be measured are both clean.

Each line on the gage member represents .5mm of diameter, while each line on the vernier represents .01mm.

Wrap the tape around the object to be measured. The vernier scale should be just below the gage member. Tighten the tape around the object with 2.25 kg tension for O.D. tapes (For I.D. tapes, use 0 kg tension).

Locate the "zero" on the vernier scale and note the highest value achieved on the gage member above it (the highest value to the left of the zero). In this example, the value is 660.0mm.

Next, observe the vernier scale's value at the point where it lines up exactly with a marked division line on the gage member. In this example, the value is 23 (0.23mm).

Finally, to obtain the diameter of the object, simply add the two values together: 660.0mm + 0.23mm = 660.23mm

When using a standard O.D. tape on an I.D. surface, add double the tape thickness to the reading to arrive at the I.D. of the part. It is suggested that direct I.D. tapes be used for inside diameter readings.

As a suggestion for checking very large diameters – pieces of masking tape can be used to hold the tape in the proper parallel position.

Tape resolution 0.01mm

#### **Care**

Tape is delicate, handle with care. Keep tape clean and dry.

After each use, wipe clean and apply a light rust preventive oil\*. Store in tape container and in a low moisture environment. \* White Easy to Read tapes Stainless or 1095 Spring Steel - Do not oil or use solvents to clean this product.

White Easy to Read 1095 Spring Steel must be stored in a low moisture environment to prevent rust.

No periodic adjustments are needed.

Make sure the tape has not been stepped on or kinked, which may destroy the tape tolerance.

PITAPE and the 🚭 logo are trademarks of Pi Tape Texas, LLC, and they are registered in the USA and in 45 other countries.




Tel. +52 (55) 2603 7450
February 2021 Rev B

NUEVO LEON Tel. +52 (81) 2235 9264

JALISCO Tel. +52 (33) 1543 3419



## TO READ OUTSIDE DIAMETER INCH WIDE TAPE

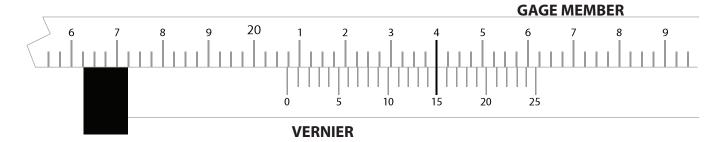

# Vernier Scale divides each graduation on Gage Member into 25 parts or .001 of an inch

#### **EXAMPLE**

Make certain the tape and object to be measured are both clean.

Each line on the gage member represents .025" of diameter, while each line on the vernier represents .001".

Wrap the tape around the object to be measured. The vernier scale should be just below the gage member. Tighten the tape around the object with 5 pounds tension for O.D. tapes (For I.D. tapes, use 0 pounds tension).

Locate the "zero" on the vernier scale and note the highest value achieved on the gage member above it (the highest value to the left of the zero). In this example, the value is 20.050".

Next, observe the vernier scale's value at the point where it lines up exactly with a marked division line on the gage member. In this example, the value is 15 (.015").

Finally, to obtain the diameter of the object, simply add the two values together: 20.050" + .015" = 20.065".

When using a standard O.D. tape on an I.D. surface, add double the tape thickness to the reading to arrive at the I.D. of the part. It is suggested that direct I.D. tapes be used for inside diameter readings.

As a suggestion for checking very large diameters – pieces of masking tape can be used to hold the tape in the proper parallel position.

Tape resolution 0.001"

### Care

Tape is delicate, handle with care. Keep tape clean and dry.

After each use, wipe clean and apply a light rust preventive oil\*. Store in tape container and in a low moisture environment. \* White Easy to Read tapes Stainless or 1095 Spring Steel - Do not oil or use solvents to clean this product.

White Easy to Read 1095 Spring Steel must be stored in a low moisture environment to prevent rust.

No periodic adjustments are needed.

Make sure the tape has not been stepped on or kinked, which may destroy the tape tolerance.

PI TAPE and the 😌 logo are trademarks of Pi Tape Texas, LLC, and they are registered in the USA and in 45 other countries.



Tel. +52 (55) 2603 7450 February 2021 Rev B NUEVO LEON Tel. +52 (81) 2235 9264

JALISCO Tel. +52 (33) 1543 3419